

# ERA420 Frequently Asked Questions.

This list of Frequently Asked Questions is not intended to replace the ERA420 instruction manual. It does not list all the functions and features of the ERA420. Please refer to the ERA420 instruction manual for more guidance on functions and programming steps not covered in these “Frequently Asked Questions”.

The ERA420 has some features and functions that are not enabled at the factory default settings. You will require the assistance of a Sharp cash register dealer to activate these features. Please contact Sharp’s customer care centre on: Phone: 1300 13 50 22, Fax: 1300 727 717, or log on to [www.sharp.net.au](http://www.sharp.net.au) to find a cash register dealer near you.

The cash register dealer will advise you of their fees for providing additional programming assistance with your ERA420.


List of common features and functions that require a dealer’s assistance to enable or implement.

1. Change the position or function of keys.
2. Change the number of Departments or PLUs available.
3. Change the number of receipt logo text lines.
4. Enable copy receipt.
5. Set the currency symbol to: \$.
6. Enable rounding of sales subtotal to the nearest the 5cents for cash sales.
7. Allow refunds to credit cards.
8. Setting up a training cashier.
9. Auto log off of cashier at the end of a sale.


This list is not exhaustive.

# EXTERNAL VIEW OF THE ER-A420

## ■ Front view

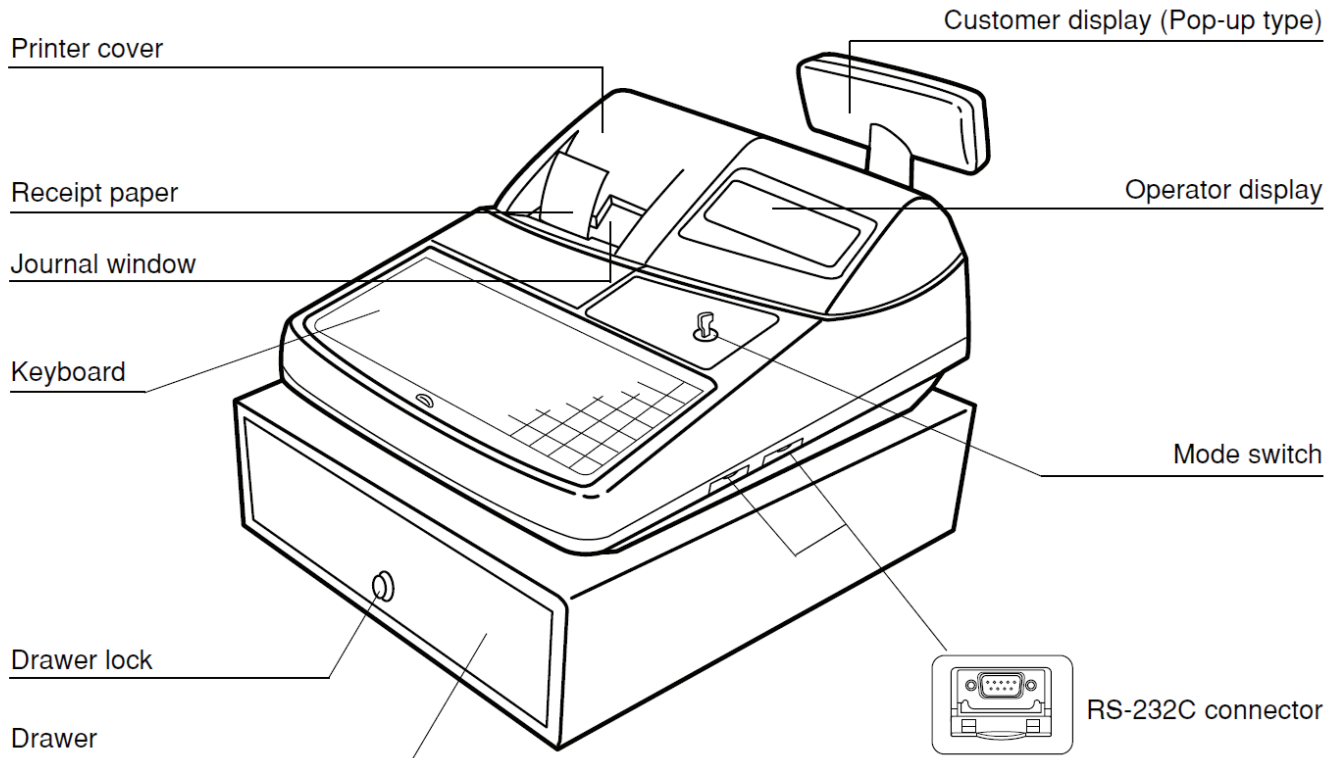


## ■ Rear view

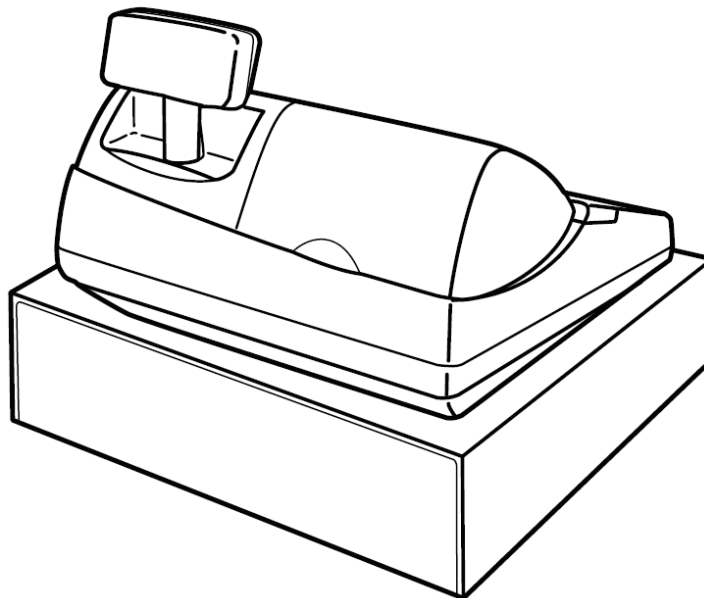


## Mode Switch and Mode Keys


The mode switch can be operated by inserting one of the three supplied mode keys – manager (MA), submanager (SM), and operator (OP) keys. These keys can be inserted or removed only when the switch is in the “REG” or “⏻” position.

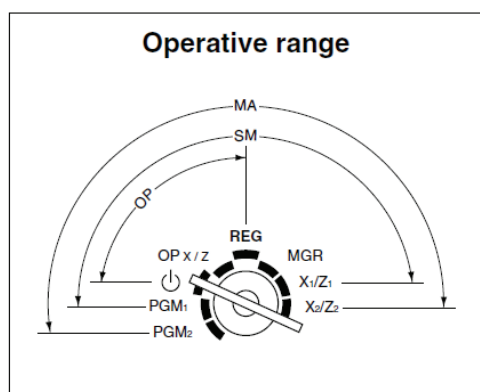


• Manager key (MA)

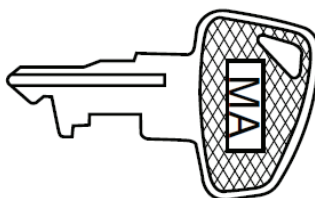

• Submanager key (SM)

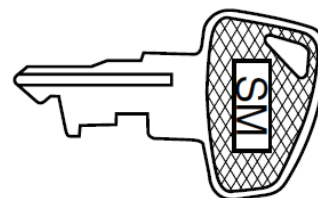

• Operator key (OP)

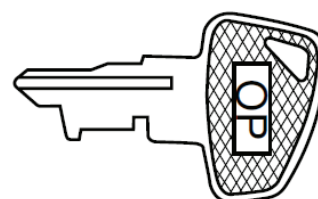

The mode switch has these settings:

- ⏻ :** This mode locks all register operation.  
No change occurs to register data.
- OP X/Z:** This setting allows cashiers/clerks to take X or Z reports for their sales information. It can also be used for displaying the date/time and printing the employee arrival/departure times. And it can be used to toggle receipt state “ON” and “OFF” by pressing the **RCPT** key. (This setting may be used only when your register has been programmed for “OP X/Z mode available” in the PGM2 mode.)
- REG:** For entering sales
- PGM1:** To program those items that need to be changed often: e.g., unit prices of departments or PLUs, and percentages.
- PGM2:** To program all PGM1 programs and those items that do not require frequent changes: e.g., date, time, or a variety of register functions
- MGR:** For manager's and submanager's entries  
The manager can use this mode to make entries that are not permitted to be made by cashiers/clerks – for example, after-transaction voiding and override entries.
- X1/Z1:** To take the X/Z report for various daily totals.
- X2/Z2:** To take the X/Z report for various periodic (weekly or monthly) consolidation of totals.

## Standard Keyboard Layout

↑ RECEIPT	↑ JOURNAL	2	4	6	L3	PRICE SHIFT	7	14	21	28	35	42	49	56	63	70
RCPT	GC COPY	1	3	5	L2	DEPT #	6	13	20	27	34	41	48	55	62	69
CASH #	VAT	⊗	•	CL	L1	CR2	5	12	19	26	33	40	47	54	61	68
#	AUTO	7	8	9	AMT	CR1	4	11	18	25	32	39	46	53	60	67
⊖	%	4	5	6	PLU /SUB	CH	3	10	17	24	31	38	45	52	59	66
PO	RA	1	2	3	NS	EX	2	9	16	23	30	37	44	51	58	65
∞	RF	0	00	000	ST	TL	1	8	15	22	29	36	43	50	57	64

↑ RECEIPT	Receipt paper feed key	AMT	Amount entry key	∞	Void key
↑ JOURNAL	Journal paper feed key	VAT	Value added tax key	RF	Refund key
0	Numeric keys	CASH #	Cashier code entry key	RA	Received-on-account key
}		⊖	Discount key	PO	Paid-out key
9		DEPT #	Department code entry key	GC COPY	Guest check copy key
00		%	Percent key	EX	Foreign currency exchange key
000		L1	PLU level shift 1 through 3 keys	PRICE SHIFT	Price level shift key
•	Decimal point key	}		NS	No-sale key
⊗	Multiplication key	L3	Credit 1 and 2 keys	#	Non-add code key
CL	Clear key	CR1		RCPT	Receipt print key
1	Department keys	CR2		AUTO	Automatic sequencing key
}		CH	Cheque key	1	Direct price lookup keys
6		ST	Subtotal key	}	
PLU /SUB	Price lookup/ subdepartment key	TL	Total (cash total) key	70	

## How do I prepare my ERA420 for set-up?

Take the ERA420 out of its box, remove the packing materials. Place the ERA420 on a flat stable surface, close to a power outlet. Also insure it will not be exposed to direct sunlight, and is away from water (taps, sinks, etc).

## How do I ensure the memory battery is charged, and why should I do so?


The ERA420 uses a built-in re-chargeable battery to hold its preset, and sales data in memory when it is switched off. If the built-in re-chargeable battery is not fully charged before you use the ERA420 your preset and sales data might be cleared when there is no power supplied to the ERA420. The battery can be expected to hold the memory contents of the ERA420, for about 1 month when fully charged. If the ERA420 has not been connected to power for sometime it might clear the contents of its memory when switched on. Please bear this in mind if you intend to store the ERA420 for long periods.

To ensure complete charging upon installation, please leave the ERA420 plugged into an AC outlet which is switch on for 24 to 48 hours.


## What sort of paper rolls do I use, and how do I install them?

The ERA420 uses two thermally sensitised paper rolls which are: 44.5 mm wide. The maximum diameter of a roll should be no more than 80mm.

1. Pull the printer cover forward and detach it. The paper cutter is mounted on the printer cover, be careful not to cut yourself.

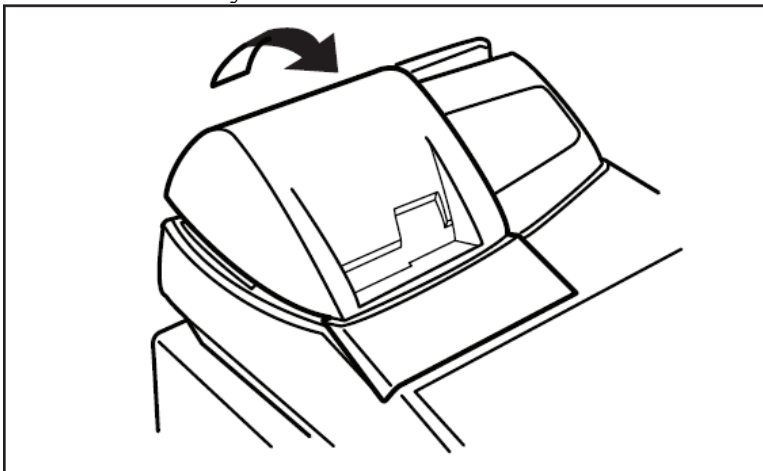


2. Your ERA420 is shipped with the print head release lever held by a white retainer in the lifted up position. Be sure to remove this retainer (see the diagram below), if you have not already done so. Move the print head release lever to the printing position (print head down).

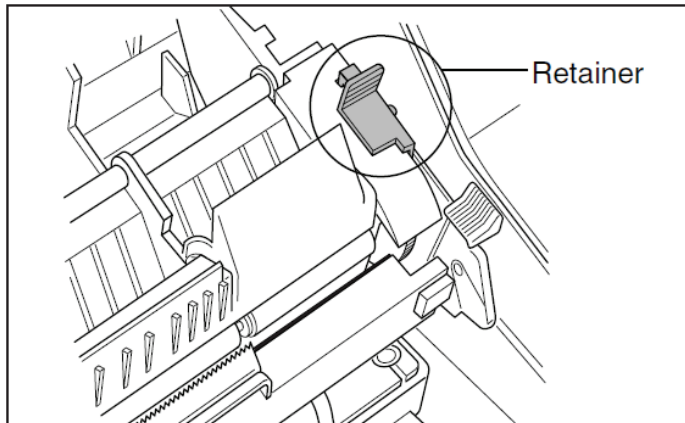


3. Installing the receipt paper roll
- Turn the mode switch to the REG position.
  - Set the paper in the receipt side of the printer as shown below.


**(How to set the paper roll)**

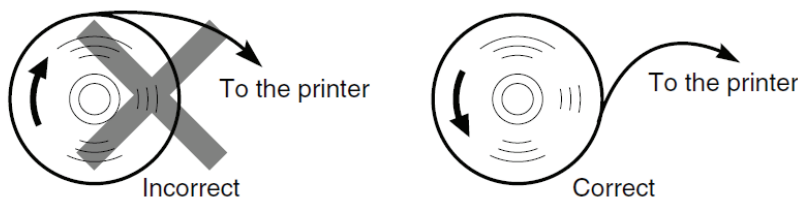


Note: If the top end of the paper roll is fixed with paste or tape, the paper at the start of the roll might not print clearly or at all. When setting a new paper roll, be sure to cut off about the first 25cm of the roll. Please cut the paper roll with a straight edge as illustrated below.

**(How to cut the paper end)**

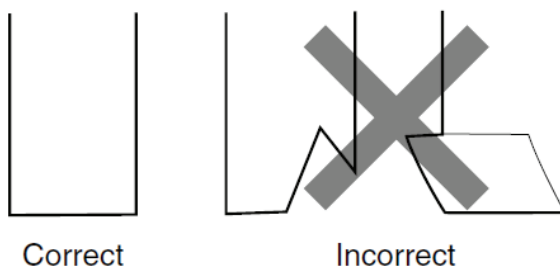


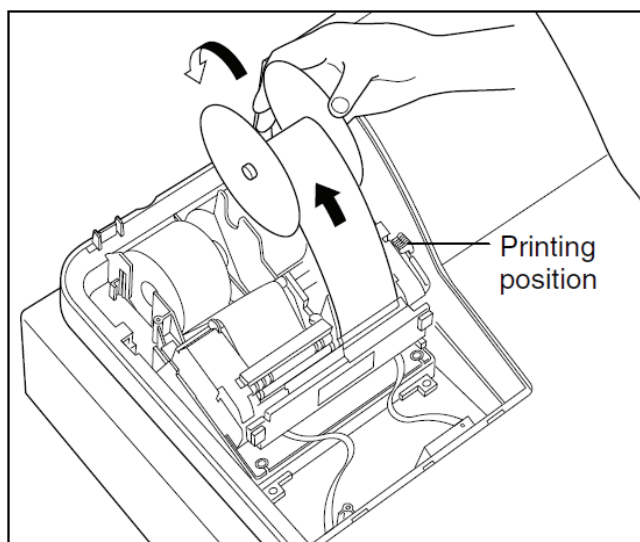
- c. Insert the end of the paper into the paper chute as shown below. It will automatically be fed through the printer. If you have trouble feeding the paper, please press the  key to feed more paper as required.

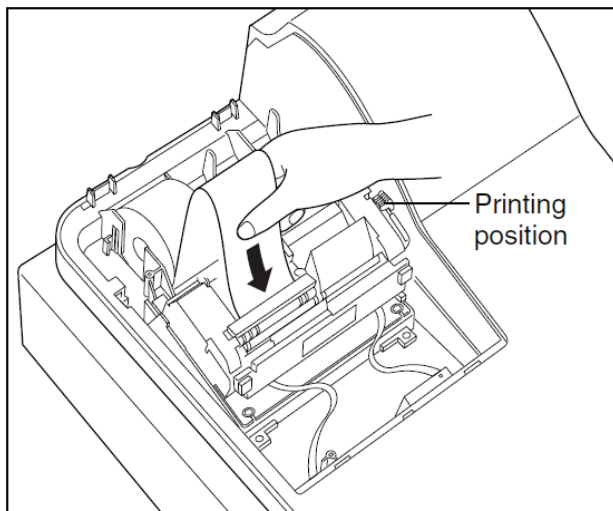


- d. Cut off the excess paper which comes out of the printer with the paper cutter on the receipt paper side.

#### 4. Installing the journal paper roll


- a. Place the paper roll in the journal side of the printer. Ensure the paper is set correctly, and the start of the roll is trimmed, in the same way the receipt roll is set and trimmed.
- b. Insert the end of the paper into the paper chute as shown below. It will automatically be fed through the printer. If you do not get enough paper through please press the  key to feed more paper as required.



- c. Insert the end of the paper into the slot in the paper take-up spool. Press the  key to feed more paper if required.
- d. Wind the paper two or three times around the spool shaft.
- e. Set the spool on the take-up spool bearing.
- f. Replace the printer cover.



5. Procedure to use to install paper rolls if you encounter problems with the normal procedure
  - a. Trim the paper rolls as required
  - b. Pull the print head release lever toward you to lift up the print head.
  - c. Insert the end of the paper into the paper chute, while pressing the receipt or journal paper feed key as required.
  - d. When the end of the paper comes out of the printer, release the feed key and return the print head release lever to its original position.
  - e. Press the feed keys to feed more paper if needed.

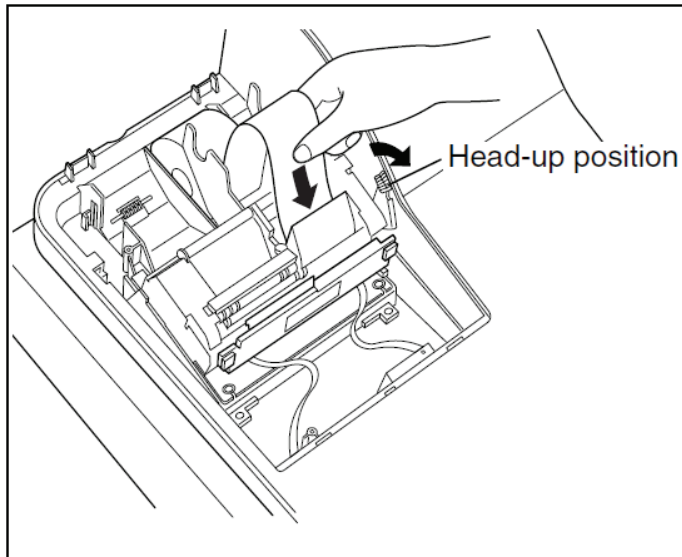

### How do I set the time and date?

1. Turn the mode key to the PGM2 position.
2. Enter the time as a four digit number. Use the 24 hour format. For example  
2:30pm would be entered as 

1	4	3	0
---	---	---	---
3. Press the 

#
---

 key
4. Enter the date as an eight digits using the day-month-year format. For example
5. 7<sup>th</sup> of December 2012 would be entered as 

0	7	1	2	2	0	1	2
---	---	---	---	---	---	---	---
6. Press the 

#
---

 key



## How do I set a 10% GST rate?

1. Turn the mode key to the PGM2 position
2. Enter: 

2	7	1	1	.	⊗	1	⊗	1	0	TL
---	---	---	---	---	---	---	---	---	---	----

## How do I set a Department as taxable or not taxable?

1. Turn the mode key to the PGM2 position

- a. To make a department taxable, enter:

2	1	1	1	.	⊗
---	---	---	---	---	---

 use numeric keys to enter the department code 

⊗	0	0	0	1	ST	TL
---	---	---	---	---	----	----

For example to make department 1 taxable enter:

2	1	1	1	.	⊗	1	⊗	0	0	0	1	ST	TL
---	---	---	---	---	---	---	---	---	---	---	---	----	----

- b. To make a department non-taxable, enter:

2	1	1	1	.	⊗
---	---	---	---	---	---

 use numeric keys to enter the department code 

⊗	0	0	0	0	ST	TL
---	---	---	---	---	----	----

For example to make department 1 non-taxable enter:

2	1	1	1	.	⊗	1	⊗	0	0	0	0	ST	TL
---	---	---	---	---	---	---	---	---	---	---	---	----	----

## How do I set the letters GST to print on the receipt?

1. Turn the mode key to the PGM2 position

Enter: 2 3 1 4 • ⊗ 1 5 ⊗ use the programming key sheet to type in GST ST TL

You can enter characters with the programming key sheet supplied with your ERA420. The programming key sheet is illustrated below

### For ER-A420

↑ RECEIPT	↑ JOURNAL	â	à	á	ê	è	é	î	ì	í	ô	ò	ó	Å	Ñ	(BACK SPACE)
æ Æ	Ø	û	ù	ú	!	?	#	\$	%	&	'	^	¢	Ç	□	=
Pt	œ	⊗	•	CL	1	2	3	4	5	6	7	8	9	0	{	}
§	£	7	8	9	Q	W	E	R	T	Y	U	I	O	P	@	/
(	)	4	5	6	A	S	D	F	G	H	J	K	L	ß	;	*
"	"	1	2	3	Z	X	C	V	B	N	M	Ä	Ö	Ü	,	>
(SHIFT)	(DC)	0	00	000	ST	TL	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(DC)	(SHIFT)

#### Note

- The programming keyboard sheet is transparent, allowing placement over the standard keyboard sheet.
- The shaded area contains the character keys which are used for programming characters.

(DC) : Used to enter the double-size character.

 
(SHIFT) : Used to change a lower-case letter/upper-case letter.

(SHIFT-2) : Used to select a symbol.

(BACK SPACE) : Used to back up the cursor for deleting.

(SPACE) : Used to enter a space.

(NUM) : Used to enter a numeric character.



## How do I turn off the power save (screen off) function?

1. Turn the mode key to the PGM2 position

Enter: 2 6 8 9 • ⊗ 0 9 9 9 TL

The ERA420 will not now go into power save mode.

## How do I give a department a descriptive name?

2. Turn the mode key to the PGM2 position

Enter: 2 1 1 4 • ⊗ key in department code ⊗ type in description ST TL

You can enter characters with the programming key sheet supplied with your ERA420. The programming key sheet is illustrated below

### For ER-A420

↑ RECEIPT	↑ JOURNAL	â	à	á	ê	è	é	î	ì	í	ô	ò	ó	Å	Ñ	(BACK SPACE)
Æ <sup>æ</sup>	Ø	û	ù	ú	! <sup>í</sup>	? <sup>¿</sup>	#	\$	%	&	'	^	¢	Ç	¤	=
Pt	œ	⊗	•	CL	1	2	3	4	5	6	7	8	9	0	{	}
§	£	7	8	9	Q	W	E	R	T	Y	U	I	O	P	@	/ -
(	)	4	5	6	A	S	D	F	G	H	J	K	L	ß	; +	: *
"	"	1	2	3	Z	X	C	V	B	N	M	Ä	Ö	Ü	, <	. >
(SHIFT)	(DC)	0	00	000	ST	TL	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(DC)	(SHIFT)

#### Note

- The programming keyboard sheet is transparent, allowing placement over the standard keyboard sheet.
- The shaded area contains the character keys which are used for programming characters.

(DC) : Used to enter the double-size character.


(SHIFT) : Used to change a lower-case letter/upper-case letter.

(SHIFT-2) : Used to select a symbol.

(BACK SPACE) : Used to back up the cursor for deleting.

(SPACE) : Used to enter a space.

(NUM) : Used to enter a numeric character.

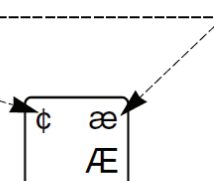

You can enter up to 16 characters for the department description.

Please refer to the instruction manual (pages 18 -19) for details.

## How do I programme the PLUs (Price Look Ups)?

The ERA420 is set with 20 PLUs when at its factory default settings. You can programme up to 500 PLUs using factory default settings. PLUs are used to “look up”, a description and price for often sold items.

Please follow the steps below to programme a PLU

To create a PLU with an open price.

2. Turn the mode key to the PGM2 position.

3. Enter: 

2	2	1	0	•	⊗
---	---	---	---	---	---

 key PLU number with numeric key pad 

⊗	1	ST	TL
---	---	----	----

4. Enter: 

1	2	0	0	•	⊗
---	---	---	---	---	---

 key PLU number with numeric key pad 

⊗
---

 associated department code 

ST	TL
----	----

This assigns the PLU to a department. A PLU must be assigned to a department.

For example: To create PLU 21 as an open price PLU assigned to department 1 you would enter:

2	2	1	0	•	⊗	2	1	⊗	1	ST	TL
---	---	---	---	---	---	---	---	---	---	----	----

1	2	0	0	•	⊗	2	1	⊗	1	ST	TL
---	---	---	---	---	---	---	---	---	---	----	----

To create a PLU with a preset price.

1. Turn the mode key to the PGM2 position.

2. Turn the mode key to the PGM2 position.

3. Enter: 

2	2	1	0	•	⊗
---	---	---	---	---	---

 key PLU number with numeric key pad 

⊗	2	ST	TL
---	---	----	----

4. Enter: 

1	2	0	0	•	⊗
---	---	---	---	---	---

 key PLU number with numeric key pad 

⊗
---

 associated department code 

ST	TL
----	----

This assigns the PLU to a department. A PLU must be assigned to a department.

For example: To create PLU 21 as a preset price PLU assigned to department 1 you would enter:

2	2	1	0	•	⊗	2	1	⊗	2	ST	TL
---	---	---	---	---	---	---	---	---	---	----	----

1	2	0	0	•	⊗	2	1	⊗	1	ST	TL
---	---	---	---	---	---	---	---	---	---	----	----

To set a price for a preset PLU.

Each PLU can have two prices set.

1. Turn the mode key to PGM2
2. Enter:

1	2	1	0	•	⊗
---	---	---	---	---	---

 key PLU number with numeric key pad 

⊗
---

 PLU's 1<sup>st</sup> price in cents 

ST
----

 PLU's 2<sup>nd</sup> price in cents 

ST
----

TL
----

For example: To set PLU 21 to a preset price 1 of \$6.00 and a preset price 2 of \$4.00 you would enter:

1	2	1	0	•	⊗	2	1	⊗	6	0	0	ST	4	0	0	ST	TL
---	---	---	---	---	---	---	---	---	---	---	---	----	---	---	---	----	----

You can skip the 2<sup>nd</sup> price by pressing 

ST
----

 twice.

For example: To set PLU 21's 2<sup>nd</sup> price to zero you would enter:

1	2	1	0	•	⊗	2	1	⊗	6	0	0	ST	ST	TL
---	---	---	---	---	---	---	---	---	---	---	---	----	----	----

Set a description or a PLU

1. Turn the Mode key to PGM2.

Enter: 2 2 1 4 • ⊗ key PLU number with numeric key pad ⊗ type description ST TL

You can enter characters with the programming key sheet supplied with your ERA420. The programming key sheet is illustrated below

For ER-A420

RECEIPT	JOURNAL	â	à	á	ê	è	é	î	ì	í	ô	ò	ó	Å	Ñ	(BACK SPACE)
Æ	Ø	û	ù	ú	!	?	#	\$	%	&	'	^	¢	Ç	¤	=
Pt	œ	⊗	•	CL	1	2	3	4	5	6	7	8	9	0	{	}
§	£	7	8	9	Q	W	E	R	T	Y	U	I	O	P	@	/ -
(	)	4	5	6	A	S	D	F	G	H	J	K	L	ß	;	*
"	"	1	2	3	Z	X	C	V	B	N	M	Ä	Ö	Ü	<	>
(SHIFT)	(DC)	0	00	000	ST	TL	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(DC)	(SHIFT)

Note

- The programming keyboard sheet is transparent, allowing placement over the standard keyboard sheet.
- The shaded area contains the character keys which are used for programming characters.

(DC) : Used to enter the double-size character.

(SHIFT) : Used to change a lower-case letter/upper-case letter.

(SHIFT-2) : Used to select a symbol.

(BACK SPACE) : Used to back up the cursor for deleting.

(SPACE) : Used to enter a space.

(NUM) : Used to enter a numeric character.

⊗

æ

Æ

You can enter up to 16 characters for the department description.

Please refer to the instruction manual (pages 18 -19) for details

## How do I put PLUs on Keyboard Levels 2 and 3?

The ERA420 has three keyboard levels. PLUs 1 to 70 are on level one. You can assign other PLUs to level two or three. The keys: **L1** **L2** **L3** are used to select each level, when programming, and when using the PLUs on different levels during a sales transaction.

### To assign a PLU to a level.

PLU keys have key numbers pre-assigned to them. These key numbers are used when assigning PLUs to keyboard levels. The key numbers for PLUs start at 21 and finish at 90, as illustrated below:

		002	004	006			027	034	041	048	055	062	069	076	083	090
		001	003	005			026	033	040	047	054	061	068	075	082	089
							025	032	039	046	053	060	067	074	081	088
							024	031	038	045	052	059	066	073	080	087
							023	030	037	044	051	058	065	072	079	086
							022	029	036	043	050	057	064	071	078	085
							021	028	035	042	049	056	063	070	077	084

1. Turn the mode key to PGM2
2. Enter:

**2** **2** **1** **9** **•** **⊗** press **L2** or **L3** to select level, key in PLU key number on numeric keypad **⊗**

enter PLU number **ST** **TL**

For example: To set PLU 71 to Direct PLU key 1 on level 2, you would enter:

**2** **2** **1** **9** **•** **⊗** **L2** **2** **1** **⊗** **7** **1** **ST** **TL**



## How do I get my business name and ABN to print on the receipt?

1. Turn the mode key to the PGM2 position
2. Type each line of your information, up to 3 lines as follows:
3. Enter the Top (first) line do the following:

Enter: 2 6 1 4 • ⊗ 1 ⊗ type in text up to 24 characters ST TL

4. Enter the second line do the following:

Enter: 2 6 1 4 • ⊗ 2 ⊗ type in text up to 24 characters ST TL

5. Enter the third line do the following:

Enter: 2 6 1 4 • ⊗ 3 ⊗ type in text up to 24 characters ST TL

You can enter up to 24 characters per line. You can enter characters with the programming key sheet supplied with your ERA420. The programming key sheet is illustrated below

### For ER-A420

↑ RECEIPT	↑ JOURNAL	â	à	á	ê	è	é	î	ì	í	ô	ò	ó	Å	Ñ	(BACK SPACE)
Æ	Ø	û	ù	ú	!	?	#	\$	%	&	'	^	¢	Ç	¤	=
Pt	œ	⊗	•	CL	1	2	3	4	5	6	7	8	9	0	{	}
§	£	7	8	9	Q	W	E	R	T	Y	U	I	O	P	@	/
(	)	4	5	6	A	S	D	F	G	H	J	K	L	ß	;	*
"	"	1	2	3	Z	X	C	V	B	N	M	Ä	Ö	Ü	,	>
(SHIFT)	(DC)	0	00	000	ST	TL	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(DC)	(SHIFT)

### Note

- The programming keyboard sheet is transparent, allowing placement over the standard keyboard sheet.
- The shaded area contains the character keys which are used for programming characters.

(DC) : Used to enter the double-size character.


(SHIFT) : Used to change a lower-case letter/upper-case letter.

(SHIFT-2) : Used to select a symbol.

(BACK SPACE) : Used to back up the cursor for deleting.

(SPACE) : Used to enter a space.

(NUM) : Used to enter a numeric character.

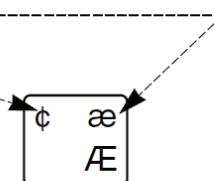


Please refer to the instruction manual (pages 18 -19) for details on text entry methods.

## How do I make a sale?

### Enter a sale directly into a department

1. Turn the mode key to REG
2. Enter the price in cents. For example \$15.00 is entered as:


3. Press the department key you wish to apply the \$15.00 sale to for example department 2:

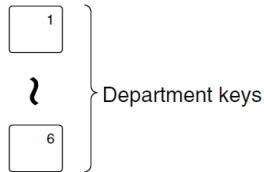

4. Press  to finalise the sale to cash

### Sell a preset PLU

1. Turn the mode key to REG
2. Press a preset PLU key you have programmed with a price:

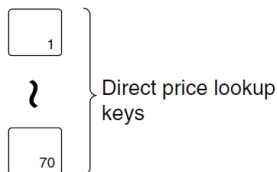


3. Press  to finalise the sale to cash

### Sell a PLU with an open price

1. Turn the mode key to REG
2. Enter the price in cents. For example \$15.00 is entered as:


3. Press a PLU key which has been programmed for an open price:

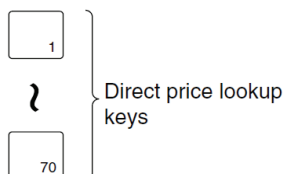


4. Press  to finalise the sale to cash

## How do I make a Correction after finalizing a Transaction (void mode)?


When you need to correct (void) incorrect entries after the sale has been finalised, Please use the following procedure:

1. Turn the mode key to MGR position.
2. Press the  key (void key)
3. Re-enter the sale information you wish to remove. All the amounts you enter will be removed from the relevant Department and/or PLU as well as the Transaction totals such as Cash in Drawer. The amounts removed will be added to the Void Mode Transaction totaliser. A Void Mode receipt will print even if the receipt is switched off.



## How do I stop the receipt printing after each sale?

1. Turn the mode key to OP X/Z
2. Press 

This key toggles the receipt printing from ON to OFF or OFF to ON

In REG mode, Press the  key to print a receipt after the sale if required.

## The ERA420 displays “OVER LIMIT” when I try to finalise a sale to cash. How do I fix this?

1. First you must either: finalise the sale to Credit card  or Cheque   
or do a subtotal void to clear the sale. Subtotal void is done by entering:

2. Turn the mode key to PGM2
3. Enter the following:

4. Turn the mode key back to REG.

The “OVER LIMIT” problem should be fixed.

## The ERA420 display shows “NOT ASSIGNED” and I cannot make a sale. How do I fix this?

You must sign a cashier on. Please do the following to fix this problem.

1. Turn the mode key to REG
2. Press the **CL** button to clear the “NOT ASSIGNED” message.
3. Enter: **1** **CASH #** to sign on cashier 1.

## How do I produce sales reports?

There are two type types of reports: X or e(X)amine reports  
Z or (Z)ero reports

X reports read out your sales data, but do not clear it from the ERA420  
Z reports read out your sales data, and clear it from the ERA420

There are two levels of X and Z reports: Daily  
Period

A daily X report allows you to examine your daily figures anytime during the day without clearing them.

A daily Z report allows you to print out your daily figures at the end of the day, and clear them. This is done to ready the ERA420 for the next day’s trading. The daily Z report also adds its data to the Period report memory.

A Period X report allows you to see your sales data for the period up to the time of the last Daily Z report.

A Period Z report allows you to print out your period sales data, and clears it to ready the ERA420 for the next period.

### To produce a daily X report, do the following:

1. Turn the mode key to X1/Z1 position
2. Enter **1** **0** **0** **⊗** **TL**
3. Your daily X report will print. It will have \*X1\* printed at the top of the report. You can see an example report on page 98 of the ERA420 instruction manual.

### To produce a daily Z report, do the following:

1. Turn the mode key to X1/Z1 position
2. Enter **1** **0** **0** **●** **⊗** **TL**
3. Your daily Z report will print. It will have \*Z1\* printed at the top of the report. You can see an example report on page 98 of the ERA420 instruction manual.

To produce a period X report, do the following:

1. Turn the mode key to X2/Z2 position
2. Enter 

2	0	0	⊗	TL
---	---	---	---	----
3. Your period X report will print. It will have \*X2\* printed at the top of the report.

To produce a period Z report, do the following:

4. Turn the mode key to X2/Z2 position
5. Enter 

2	0	0	●	⊗	TL
---	---	---	---	---	----

Your period Z report will print. It will have \*Z2\* printed at the top of the report.

This list of Frequently Asked Questions is not intended to replace the ERA420 instruction manual. It does not list all the functions and features of the ERA420. Please refer to the ERA420 instruction manual for more guidance on functions and programming steps not covered in these “Frequently Asked Questions”.

The ERA420 has some features and functions that are not enabled at the factory default settings. You will require the assistance of a Sharp cash register dealer to activate these features. Please contact Sharp’s customer care centre on: Phone: 1300 13 50 22, Fax: 1300 727 717, or log on to [www.sharp.net.au](http://www.sharp.net.au) to find a cash register dealer near you.

The cash register dealer will advise you of their fees for providing additional programming assistance with your ERA420.